



ICP Family Programmers

User's Manual

1	Connectors.....	3
1.1	“Power” Connector (Power Jack, Center Pin 2.1mm).....	3
1.2	“USB” Connector (Type-B Female).....	3
1.3	“RS-232 IN” Connector (D-type 9 Female).....	3
1.4	“RS-232 OUT” Connector (D-type 9 Male, ICP2-GANG only).....	3
1.5	“TARGET” Connector (D-type 15 Female). ICP2-GANG: 4 Identical Channels, ICP2: 1 channel.....	4
1.6	Typical Connection to “TARGET” Connector.....	5
2	PC-Driven and Standalone Modes.....	6
3	PASS/FAIL LEDs and Outputs.....	6
4	Standalone Operation without PC.....	6
5	Host Computer Requirements.....	7
6	Installation.....	7
6.1	Preliminary Installation.....	7
6.1.1	Software Installation.....	7
6.1.2	Preliminary Hardware Installation.....	7
6.2	ICP2-GANG Software Setup.....	7
6.3	ICP2 Software Setup.....	7
6.3.1	Run “ICP_Win.exe” Program.....	7
6.3.2	Run “Programmer/Quick Start Wizard” and follow the Wizard.....	7
7	Plug-in to MPLAB® IDE.....	7
8	Control Center.....	8
8.1	Control Center in PC-Driven Mode.....	8
8.2	Control Center in Standalone Mode.....	8
9	Menu Commands.....	8
9.1	File Menu (Alt-F).....	8
9.2	Edit Menu (Alt-E).....	8
9.3	Environment (Alt-P).....	8
9.4	Serialization Menu (Alt-S).....	8
9.5	Device Menu (Alt-D).....	8
9.6	Programmer Menu (Alt-G).....	8
9.7	Run Menu (Alt-R).....	9
9.8	Communication Menu (Alt-C).....	9
9.9	Options Menu (Alt-O).....	9
9.10	Help Menu (Alt-H).....	9
10	Shortcuts.....	9
11	Preparing Environment and Transferring Environment to Programmer.....	10
12	Serialization.....	10
12.1	Create Serialization File.....	10
12.2	Serialization File Example 1.....	11
12.3	Serialization File Example 2 (User File scheme).....	11
12.4	Enable Serialization.....	12
12.5	Disable Serialization.....	12
13	Voltages.....	13
13.1	Vdd Source and LVP Mode.....	13
13.2	Vpp Voltage.....	13
13.3	Vdd-to-Vpp Delay.....	13
13.4	ICP-01 Compatibility.....	13
14	Clock/Data/MCLR(Advanced).....	13
14.1	MCLR/VPP Idle State.....	13
14.2	Clock/Data Idle State.....	13
14.3	Clock Speed.....	13


ICP Family User's Manual

- 14.4 ICP-01 Compatibility 13
- 15 Preferences 14
 - 15.1 Blank Check before Programming [] 14
 - 15.2 Clear flash device before programming [x] 14
- 16 Configuration File 14
- 17 Command Line Parameters (GUI)..... 14
- 18 DLL Functions 14
- 19 Command Line Interface (non-GUI)..... 14
- 20 Manual Production Mode (One-Touch Operation) 15
- 21 In-Circuit Programming..... 15
 - 21.1 Vdd 15
 - 21.2 Vpp 15
 - 21.3 CLOCK and DATA 15
 - 21.4 Delay between Vdd and Vpp 15
- 22 Appendix A: Power Supply 15
- 23 Technical Assistance 16
- 24 Warranty 16
- 25 Contact 16
- 26 Copyright Notice 16

ICP Family User's Manual

1 Connectors

1.1 "Power" Connector (Power Jack, Center Pin 2.1mm)

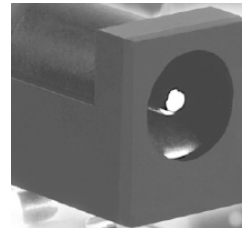

Pin No.	Pin Name (ICP2-GANG)	Pin Name (ICP2)	Voltage Range
1/center	POWER (+)	POWER (+/-)	12V to 15V
2	POWER (-)	POWER (+/-)	

1.2 "USB" Connector (Type-B Female)



1.3 "RS-232 IN" Connector (D-type 9 Female)


Pin No.	Pin Name	Voltage Range	Pin Type	Description
1	-	-	-	Not connected
2	PC_RXD	RS-232 level	RS-232 output	TxD output to PC
3	PC_TXD	RS-232 level	RS-232 input	RxD input from PC
4	PC_DTR	-15V to +15V	Power	ICP2-GANG: Not connected ICP2: Additional power supply input
5	GND	-	GND	Ground connection
6	12V_OUT	11-14VDC	Power	ICP2-GANG: power supply output ICP2: Not connected
7,8,9	-	-	-	Not connected

1.4 "RS-232 OUT" Connector (D-type 9 Male, ICP2-GANG only)

Pin No.	Pin Name	Voltage Range	Pin Type	Description
1	-	-	-	Not connected
2	CHAIN_232_RXD	RS-232 level	RS-232 input	RxD input from next ICP2-GANG
3	CHAIN_232_TXD	RS-232 level	RS-232 output	RxD output to next ICP2-GANG
4	-	-	-	Not connected
5	GND	-	GND	Ground connection
6,7,8,9	-	-	-	Not connected

ICP Family User's Manual

1.5 "TARGET" Connector (D-type 15 Female). ICP2-GANG: 4 Identical Channels, ICP2: 1 channel

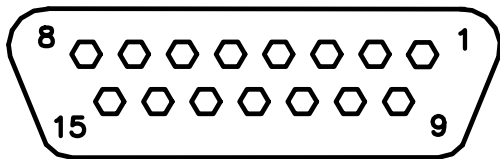

Pin No.	Pin Name	Voltage Range	Pin Type	Description
1	T_VDD	2.0V to 5.5V	Output or input with weak pull-down and programmable strong pull-down	Target VDD supply voltage
2	GND	-	-	Ground connection
3	T_SCK	2.0V to 5.5V	CMOS output or input with weak pull-down	Target clock
4	T_MOSI	2.0V to 5.5V	CMOS output or input with weak pull-down	Target data
5	T_MISO	2.0V to 5.5V	CMOS output or input with weak pull-down	Target data, internally connected to T_MOSI
6	T_VPP	2.0V to 13.5V	Output or input with weak pull-down	Target VPP supply voltage
7	T_TARG	5.0V	CMOS output	Optional output to control target power supply, useful if VDD current exceeds 250mA
8	T_VTEST	2.0V to 13.5V	Output	Target VTEST signal for PIC17Cxxx family
9	T_DIO_0	2.0V to 5.5V	CMOS output or input with weak pull-down	Target VPP output for LVP or FOSC signal for PIC17Cxxx family
10	T_DIO_1	2.0V to 5.5V	CMOS output or input with weak pull-down	Target PGM output for LVP
11	GND	-	-	Optional ground connection
12	GND (1)	-	-	Optional ground connection
13	GO (1)	0-1.0V or N/C	CMOS input with pull-up 10K	Input for programming activation in standalone mode
14	PASS_OUT(1)	5.0V	CMOS output	Output for pass/fail/busy indication
15	FAIL_OUT (1)	5.0V	CMOS output	Output for pass/fail/busy indication

Notes: (1) Dedicated for standalone operation without PC

ICP Family User's Manual

1.6 Typical Connection to "TARGET" Connector

<i>Pin No.</i>	<i>Pin Name</i>	<i>Standard (5-pin) Programming PIC10/12/16/18/24 dsPIC®</i>	<i>LVP (6-pin) Programming PIC10/12/16/18</i>	<i>PIC17</i>	<i>I2C</i>	<i>Keeloq®</i>
1	T_VDD	VDD	VDD	VDD	VDD	VDD
2	GND	GND	GND	GND	GND	GND
3	T_SCK	CLOCK (PGC)	CLOCK (PGC)	CLOCK (PGC)	SCL	CLOCK
4	T_MOSI	DATA (PGD)	DATA (PGD)	DATA (PGD)	SDA	DATA
5	T_MISO	-	-	-	-	-
6	T_VPP	VPP	-	VPP	-	-
7	T_TARG	-	-	-	-	-
8	T_VTEST	-	-	VTEST	-	-
9	T_DIO_0	-	VPP	FOSC	-	-
10	T_DIO_1	-	PGM	-	-	S1

ICP Family User's Manual

2 PC-Driven and Standalone Modes

ICP family programmers can be operated in PC-driven and/or standalone mode

Programmer	PC-Driven	Standalone
ICP2	Yes	Yes
ICP2-GANG	Yes (single channel only)	Yes
ICP-01	Yes	No

PC-driven mode means that all programming parameters and data are set in **PC** and the PC executes required sequences (programming, verification, blank check, etc)

Standalone mode means that all programming parameters and data ("Environment") are saved in **programmer's** non-volatile flash memory. See paragraph "Preparing Environment and Transferring Environment to Programmer".

Standalone programming can be activated by 2 ways:

- from PC
- by GO input on the programmer unit

Simultaneous multi-channel programming can be done in standalone mode only

3 PASS/FAIL LEDs and Outputs

###	Conditions	PASS LED	FAIL LED	PASS Output	FAIL Output
1.	Power-up	2 sec ON		2 sec ON	
2.	Operation in-progress (busy)	ON		ON	
3.	Programming done: PASS	ON	OFF	ON	OFF
4.	Programming done: FAIL (verification error)	OFF	ON	OFF	ON
5.	UUT problem during operation: - Vdd overload - Vpp overload - I2C communication error	OFF	Fast blink	OFF	ON
6.	Non-UUT problem during standalone operation: - database error - device not supported - no Keeloq® support - no dsPIC® support - etc.	OFF	Slow blink	OFF	OFF
7.	No firmware presents (bootloader only)	Slow blink	OFF	OFF (not supported)	
8.	Firmware upgrade in-progress	Fast blink	OFF	OFF (not supported)	

4 Standalone Operation without PC

- Prepare an environment and transfer to ICP2 or ICP2-GANG – see paragraph 11 for details.
NOTE: once the environment is saved in **non-volatile** memory it's automatically ready for programming
- Short pin GO (:13) of the target connector to GND (:12) for at least 100ms to start programming
- Observe PASS/FAIL LEDs or/and pins PASS (:14) and FAIL(:15) – see paragraph 3 for details

5 Host Computer Requirements

- Pentium-100 or greater IBM PC compatible
- VGA or higher resolution (1024x768 is recommended)
- 64MBytes of RAM
- Windows-95/98/ME/2000/XP/NT
- At least 20MBytes of hard disk space
- CD-ROM drive
- Free RS-232 or USB port

6 Installation

6.1 Preliminary Installation

6.1.1 Software Installation

To install the software supplied, follow the steps below:

- Insert ICP family CD in the CD-ROM drive. An opening screen appears
- Click "Install ICP for Windows" and follow the on-screen instructions

If the opening screen does not appear:

- Double-click on the "My Computer" icon
- Double-click the icon for your CD-ROM drive
- Double-click "IcpSetupWithDll.exe"

6.1.2 Preliminary Hardware Installation

- Connect the ICP2 or ICP2-GANG to its power supply
- Connect RS-232 or USB cable between PC and the programmer
- Install USB driver according to "**ICP2 USB Driver Installation**" manual
NOTE: USB driver installation is not required for operation with RS-232 port

6.2 ICP2-GANG Software Setup

- Install ICP2-GANG according to "**ICP2-GANG Quick Start**" manual

6.3 ICP2 Software Setup

6.3.1 Run "ICP_Win.exe" Program

- Double-click "ICP_Win" icon
- Press "Yes" if message "Newer firmware is available. Upgrade now?" appears

6.3.2 Run "Programmer/Quick Start Wizard" and follow the Wizard

7 Plug-in to MPLAB® IDE

- ICP2-GANG and ICP2 programmers are fully integrated into Microchip MPLAB® IDE.

Press "Yes" during software installation after the following message appears "Do you want to install ICP Plug-in for MPLAB?"

8 Control Center

Control Center has 2 operation modes: PC-driven and standalone

8.1 Control Center in PC-Driven Mode

Control Center in PC-driven mode allows the following operations:

- Edit device ID
- Edit configuration bits of the device
- Select memory space
- Set PM range
- Programming, Verification, Blank Check and Read

8.2 Control Center in Standalone Mode

Control Center in standalone mode allows the following operations:

- Get environment information for all channels
- View environment details of selected channel
- Programming
- Get latest results

9 Menu Commands

9.1 File Menu (Alt-F)

Open...	Open a HEX file from disk and load it into buffer memory area
Save	Save the currently loaded file
Save As...	Save the buffer to a HEX file on disk
Save Configuration	Save all current settings
Exit	Exit the software

9.2 Edit Menu (Alt-E)

Edit/Fill Program Memory	Fill an area of the Program Memory with a specified value
Edit/Fill Data Memory	Fill an area of the Data Memory (EEPROM) with a specified value
Read-only Editors	Enable/disable edit of Program and Data Memory buffers

9.3 Environment (Alt-P)

Save Environment As...	Save current setup and buffers in environment format (*.pj2)
Transfer Environment to Programmer...	Transfer Environment (*.pj2) to programmer
Environment Wizard...	

9.4 Serialization Menu (Alt-S)

Disable	Disable serialization
Load File	Load serialization file
Create File	Create serialization file

9.5 Device Menu (Alt-D)

Select a type of device to be programmed

9.6 Programmer Menu (Alt-G)

Select Programmer	Select programmer (ICP-01, ICP2 or ICP2-GANG)
GANG Configuration	Select active GANG channels (64 max)
Assign Address to GANG Box	Assign address to currently connected programmer (1-16). See "ICP2-GANG Quick Start" for details
Quick Start Wizard	

ICP Family User's Manual

9.7 Run Menu (Alt-R)

Program	PC-driven mode: program data in the buffer(s) into the device Standalone mode: activate standalone programming
Verify	Verify the data in the device against the data in the buffer(s)
Blank Check	Check the data in the device for the blank state
Read	Read the device and store the data in the buffers
Program Only	Open a window for repeated programming

9.8 Communication Menu (Alt-C)

RS-232/USB/Bluetooth COM	Select the desired COM port
Connect	Connect to the programmer

9.9 Options Menu (Alt-O)

Voltage	Set desired voltages
Clock/Data/MCLR(Advanced)	Set desired Clock/Data/MCLR parameters
Preferences	Select options for programming
Firmware Upgrade	Execute firmware upgrade
Activation of Options	Execute activation of optional components: - DLL/Command Line Support (D) - dsPIC®/PIC24 Support (P) - Keeloq® Support (K) Note: Contact Softlog Systems for activation details

9.10 Help Menu (Alt-H)

Read me	Display "read me" file
About	Connect with the programmer and display software and firmware versions

10 Shortcuts

Save	Ctrl-S
Open...	Ctrl-O
Program	F5
Verify	F6
Blank Check	F7
Read	F8
Programming Only	F9
Menu	F10
Close Window	Ctrl-F4
Exit	Alt-F4

11 Preparing Environment and Transferring Environment to Programmer

- Run "Environment/Environment Wizard" and follow the Wizard
- Select programmer and press "Next"
- ICP2-GANG only: select GANG channels and press "Next"
- Select Device
From the "Device" list select a device to be programmed and press "Next"
- Set Voltages and press "Next"
- Load (open) a HEX file.
NOTE: The programmer software is able to read ID information, data memory (EEPROM) contents and configuration bits from the HEX file
- Save Environment
 - Press on "... " button
 - Type in environment name, 16 characters max
 - Press "Save"
 - Press "Next"
- Transfer Environment to Programmer
 - Press on "Transfer Environment" button, select your environment and press "Open"
 - Wait until environment is transferred to all channels
 - Press "Next"
- Switch to Standalone Mode
 - Press on "Standalone Mode" button
 - Press "Finish"
- Your system is ready for standalone programming

12 Serialization

12.1 Create Serialization File

- Select "Serialization/Create File" to generate a serialization file
- Enter the following data:
 - Serial Number (serialization scheme): random, pseudo-random, sequential and user file
 - Start Address. The address should be valid for the device
 - Number of Words. Enter the number of words (1 to 8) for your serial number.
 - Start Value. Enter the start value (1 to 16 hex digits). If the start value is greater than the maximum value for the number of words selected the most significant digits will be truncated. The start value must differ from zero for pseudo-random scheme.
 - Increment Value. Valid for the sequential scheme only
 - User File Name. Valid for "user file" scheme only
- Press OK to save a serialization file

NOTES:

- A currently selected serialization file will be updated after any successful programming for single-channel programming and after any programming attempt for ICP2-GANG

ICP Family User's Manual

- The "retlw" opcode will be automatically generated for a selected type of devices, i.e.:
 - 08(Hex) for low-end microcontrollers (12C5xx, etc)
 - 34(Hex) for mid-range microcontrollers (16C/Fxxx)
 - b6(Hex) for high-end microcontrollers (17C7xx)
 - 0c(Hex) for enhanced microcontrollers (18Fxxx)

12.2 *Serialization File Example 1*

SerializationScheme = 2 (0-Random, 1-Pseudo-Random, 2-Sequential, 3-User File)
StartAddress = 0005 (Hex)
NumberOfWords = 2 (Hex)
CurrentValue = 0000000000001234 (Hex)
IncrementValue = 1 (Hex)
UserFile =

The following program memory locations will be updated as follows:

- PIC16xxx
 - 0005: 3434
 - 0006: 3412
- PIC12C5xx
 - 0005: 0834
 - 0006: 0812

12.3 *Serialization File Example 2 (User File scheme)*

SerializationScheme = 3 (0-Random, 1-Pseudo-Random, 2-Sequential, 3-User File)
StartAddress = 0005 (Hex)
NumberOfWords = 2 (Hex)
CurrentValue = 0000000000001234 (Hex)
IncrementValue = 1 (Hex)
UserFile = File1.num

User file should contain serial numbers in HEX radix, for example:

1111
2222
3333
4444
5FC1

The user file will be updated by placing semicolon (;) at very beginning of the string, for example:

;1111
;2222
3333
4444
5FC1

If your numbers start from very beginning of the string the 1-st digit will be replaced by semicolon:

;111
;222
3333
4444
5FC1

12.4 Enable Serialization

Select "Serialization/Load File" to activate serialization

12.5 Disable Serialization

The serialization will be disabled in the following cases:

- "File/Open..." command is executed
- "Serialization/Disable" command is executed
- "Edit/Read-only Editors" is set to edit mode
- "Run/Read" command is executed
- a new device is selected
- user's serialization file is empty
- Control Center switches between PC-driven and standalone modes

13 Voltages

13.1 Vdd Source and LVP Mode

The programmer executes operations at the following Vdd voltages

###	Vdd Source	LVP Mode	Vdd during Programming	Vdd during Verify	Vdd during Blank Check	Vdd during Read
1.	Programmer	Normal	Database	VddMin, VddMax (Note 2)	VddMin	Database
2.	Programmer	LVP	VddMax (Note 1)	VddMax	VddMax	VddMax
3.	Target	-	Target	Target	Target	Target

Notes:

- 1) Use LVP mode if you want to change default programming voltage
- 2) Set VddMin=VddMax to disable the 2-nd verification pass

13.2 Vpp Voltage

The Vpp voltage is the same for all the operations. It is recommended to use default Vpp voltage for a device

13.3 Vdd-to-Vpp Delay

Delay between Vdd and Vpp can be in range 0.1...100ms. It is recommended to use default delay of 4ms to correctly enter the programming mode. Longer delays may be useful if the Vdd line has high capacitance (more than 200uF) which causes the Vdd to rise slowly

13.4 ICP-01 Compatibility

Press on "ICP-01 compatible" button forces the following settings:

- Vdd Source: Programmer
- LVP Mode: Normal
- Voltages: Database values

14 Clock/Data/MCLR(Advanced)

14.1 MCLR/VPP Idle State

Reset (GND): Programmer permanently keeps MCLR in reset state (GND) when no operation
Released: Programmer releases MCLR with weak pull-down of about 160KΩ

14.2 Clock/Data Idle State

Active: Programmer configures data/clock pins as outputs when no operation
Released: Programmer releases data/clock with weak pull-downs of about 300KΩ

14.3 Clock Speed

Clock speed can be selected for enhanced microcontrollers (PIC18F) and 16-bit devices (PIC24, dsPIC30 and dsPIC33). It's recommended to use high clock speed (2.5MHz) for devices with memory size bigger than 32K and dsPICs

14.4 ICP-01 Compatibility

Press on "ICP-01 compatible" button forces the following settings:

- MCLR/VPP Idle State: Reset (GND)
- Clock/Data Idle State: Active
- Clock Speed: <500KHz (100-500KHz, depends on device family)

15 Preferences

15.1 *Blank Check before Programming* []

Enables/disables blank check operation before device programming. The default is OFF

15.2 *Clear flash device before programming* [x]

When the option is ON the device will be automatically erased

IMPORTANT: this option must be set to ON for proper operation with most of flash devices

16 Configuration File

The ICP setup is saved in a configuration file named "icp01.cfg".

IMPORTANT: the program reads a configuration file that is located in a directory which specified in "Start in" property. This approach allows creation of unlimited configurations on the same PC

Normally, a configuration file should **not** be modified by a text editor.

17 Command Line Parameters (GUI)

Some parameters can be loaded from the command line:

<Hex file>	- hex file to be loaded
/c<Configuration file>	- configuration file to be loaded, overwrites local "icp01.cfg"
/s<Serialization file>	- serialization file to be loaded
/p	- production mode (one-touch operation)

Examples:

- Start in the production mode and load file "hex1.hex":

```
<path to ICP_Win.exe> /p hex1.hex
```

- Start in the production mode and load hex file "hex1.hex" and serialization file "ser1.ser":

```
<path to ICP_Win.exe> /p hex1.hex /s ser1.ser
```

"Start in" property should specify a directory where "hex1.hex" and "ser1.ser" are located

18 DLL Functions

ICP family programmers can be run from the user's application using powerful set of DLL functions. See document "***DLL Description.pdf***" for details

19 Command Line Interface (non-GUI)

ICP family programmers can be run from the user's application using full-featured command line interface. See document "***ICP Command Line.pdf***" for details

ICP Family User's Manual

20 Manual Production Mode (One-Touch Operation)

The production mode is a powerful option for volume programming

The following steps should be done to correctly prepare the software for programming in the production mode:

- Create a subdirectory (C:\FILE_HEX)
- Copy your CFG, HEX and SERIALIZATION files to FILE_HEX subdirectory (for example: "hex1.hex" and "ser1.ser")
NOTE: serialization file is optional
- Change ICP_Win shortcut property "Start in" to C:\FILE_HEX
- Change ICP_Win shortcut property "Target" to C:\...\ICP_Win.exe hex1.hex /s ser1.ser /p
- Double-click ICP_Win icon for programming

The program will be terminated in the following cases:

- Communication error
- Hex file error
- Serialization file should be loaded (/s appears) but loading is failed

21 In-Circuit Programming

Standard in-circuit programming is done through 5 wires (VDD, GND, CLOCK, DATA and VPP)

21.1 Vdd

- Maximum Vdd current consumption by the application circuit : 250mA
 - Maximum Vdd capacitance: 1000-10000uF. Increase Vdd-to-Vpp delay by about 20ms for every 1000uF
- NOTE: If your circuit has low current consumption (less than 10mA) in conjunction with high capacitance (more than 100uF), the load resistor (100-510 Ohm) must be connected between Vdd and GND pins of the programmer for faster discharge of Vdd capacitor

21.2 Vpp

Vpp recommended load: > 1KOhm, < 15nF for ICP2 family, <1.5nF for ICP-01

21.3 CLOCK and DATA

CLOCK and DATA recommended load: > 10KOhm, < 33pF

21.4 Delay between Vdd and Vpp

This delay should be as short as possible (4ms is recommended)

NOTE: for more details contact Softlog Systems to obtain "**ICP2-GANG Specification**" and "**ICP2 Specification**"

22 Appendix A: Power Supply

The ICP system is shipped with its own power supply. If the user wishes to connect his/her own power, make sure the following specifications are met:

Programmer	Output Voltage	Output Current	Center Terminal, 2.1mm
ICP2-GANG	12VDC	1.5A	"+"
ICP2	12VDC	0.5A	"-" or "+"
ICP-01	12VDC	0.5A	"-"

23 Technical Assistance

You may contact Softlog Systems for technical assistance by calling, sending a fax or e-mail. To help us give you quick and accurate assistance, please provide the following information:

- Software version number, firmware version number and product serial number (if available). This information is displayed at the program start
- Detailed description of the problem you are experiencing
- Error messages (if any)
- Microcontroller part number (if device-related)
- Send us your "icp01.cfg" file

24 Warranty

Softlog Systems (2006) Ltd. warrants this product against defects in materials and workmanship for a period of 1 (one) year. This warranty will not cover programmers that, in the opinion of Softlog Systems, have been damaged due to abuse, improper use, disassembly, replacement of parts or attempted repair by anyone other than an authorized Softlog Systems service technician.

This product must be returned to the supplier for warranty service within the stated period. The buyer shall pay all shipping costs and other charges or assessments for the product by the supplier.

Softlog Systems shall not be liable for any indirect, incidental, or consequential damages, regardless of whether liability is based upon breach of warranty, negligence, strict liability in tort, or any other theory, Softlog Systems will never be liable in an amount greater than the purchase price of the products described by this express warranty. No agent, distributor, salesperson, or wholesale or retail dealer has the authority to bind Softlog Systems to any other affirmation, representation, or warranty concerning these goods.

25 Contact

Softlog Systems (2006) Ltd.

Rojanski 18 St. Rishon-Letzion 75070 Israel

Phone: 972-3-9515359
Fax: 972-3-9527520
Web: www.softlog.com
E-mail: sales@softlog.com, support@softlog.com

26 Copyright Notice

Windows is a registered trademark of Microsoft Corporation. Microchip, MPLAB, PIC and dsPIC are registered trademarks of Microchip Technology Incorporated.